



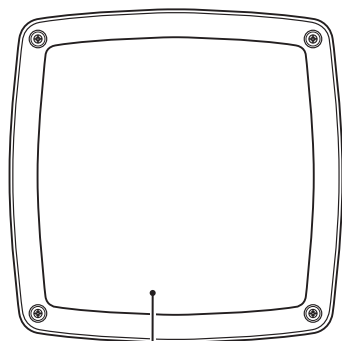
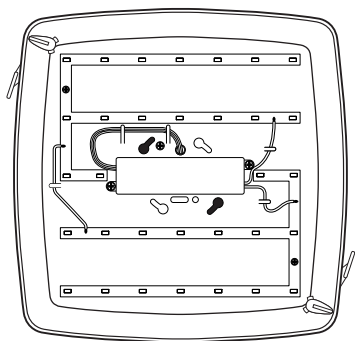
12 in. Energy Saving Flush Mount Ceiling Fixture (Page 1)

Économies d'énergie encastré plafonnier, de 30,5 cm (Page 4)

 
Ahorro de energía ras lámpara de techo de montaje, de 30,5 cm (Page 7)

To Begin/Pour commencer/Para comenzar

- ⚠** **Ⓔ WARNING:** Please read this entire manual before installation. Verify the following contents:
- Ⓕ AVERTISSEMENT :** Veuillez lire tout ce mode d'emploi avant l'installation. Vérifiez que tous les éléments ci-dessous sont présents:
- Ⓗ ADVERTENCIA:** Por favor, lea este manual completo antes de realizar la instalación. Verifique el siguiente contenido:



- Ⓔ** Hardware kit*
Ⓕ Kit de petit matériel de fixation*
Ⓗ Kit de herrajes*



- Ⓔ** Support chain
Ⓕ Chaîne de support
Ⓗ Cadena de soporte

- Ⓔ** Diffuser
Ⓕ Diffuseur
Ⓗ Difusor



* Actual hardware may differ from illustration
* Les éléments de fixation réels peuvent être différents de ceux de l'illustration.
* Los herrajes reales pueden diferir de los que se muestran en la ilustración

Required/Nécessaire/Se necesita

Installation time: 30 minutes/Durée de l'installation: 30 minutes/Tiempo de instalación: 30 minutos



- Ⓔ** Phillips screwdriver
Ⓕ Tournevis à pointe cruciforme
Ⓗ Destornillador Phillips



- Ⓔ** Flathead screwdriver
Ⓕ Tournevis à tête plate
Ⓗ Destornillador de cabeza plana



- Ⓔ** Pliers
Ⓕ Pince
Ⓗ Alicates



- Ⓔ** Step ladder
Ⓕ Escabeau
Ⓗ Escalera de mano



- Ⓔ** Safety glasses
Ⓕ Lunettes de sécurité
Ⓗ Anteojos de seguridad

English

Warnings and Cautions

WARNING

- Shut off power at the circuit breaker or fuse panel before removing the old fixture or installing the new one.
- LEDs can be damaged by electrostatic discharge (ESD) shock. Before installation, discharge yourself by touching a grounded bare metal surface to remove this hazard.

CAUTION

- This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Important Safety Instructions

WARNING: To reduce the risk of FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

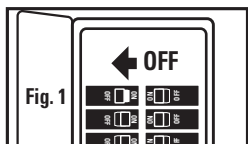
1. For **INDOOR USE ONLY**.
2. Do **NOT** touch LEDs.
3. Do **NOT** look directly at lighted LEDs for any length of time.
4. Do **NOT** touch, operate, or install fixture while in contact with water.
5. Electrical requirements for **LF1058-SSP-12LFO-G**:
120V, 60Hz, 0.27A
6. Do not leave bare wires exposed outside of the electrical box.

SAVE THESE INSTRUCTIONS IN A LOCATION CLOSE TO THE FIXTURE TO REFER TO THEM AT A LATER TIME.

Dimmer Instructions

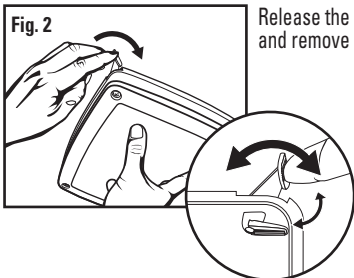
THIS FIXTURE IS DIMMABLE BY SPECIFIC FORWARD PHASE ELECTRONIC (TRAIC) DIMMERS AND IS NOT COMPATIBLE WITH 0-10V DIMMING SYSTEMS. Dimmers tested to be compatible with this fixture are the Lutron® Diva® C•L™: DVWCL-153P or DVCL-153P, Lumea® C•L™: LGCL-153P, and Toggler® C•L™: TGCL-153P. (This list of dimmers does not imply any guarantee or warranty of compatibility with a particular application. Dimmers not listed do not imply non-compatibility.)

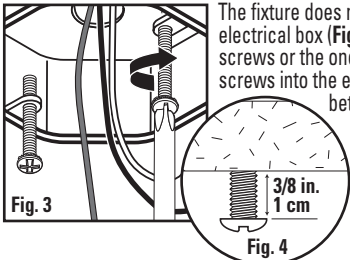
Preparation



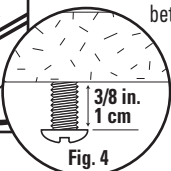
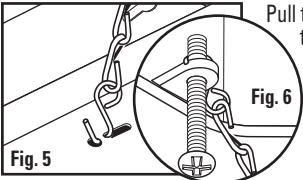
Disconnect power to the electrical box and remove the old fixture. If more than two wire leads are present, keep track of which wires were connected together. **WARNING:** Shut off power at the circuit breaker or fuse panel before removing the old fixture (Fig. 1).

Installation

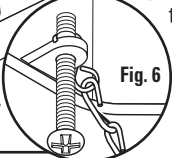
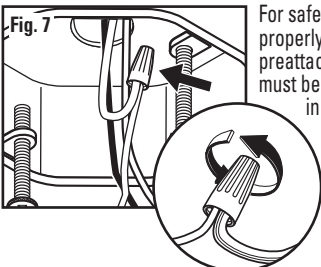
- 1**  Fig. 2

Release the locking levers on both sides of the diffuser and remove it from the fixture pan (Fig. 2).
- 2**  Fig. 3

The fixture does not use a mounting bracket to secure it to the electrical box (Fig. 3). Use either the existing electrical box screws or the ones included in the hardware kit. Drive the screws into the electrical box until there is about 3/8 in. between the ceiling and the underside of the screw head (Fig. 4).

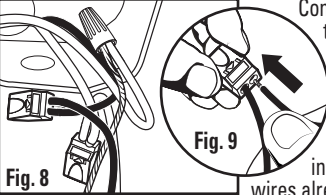
 Fig. 4
- 3**  Fig. 5

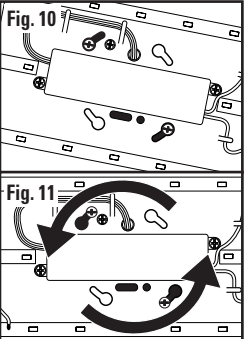
Pull the fixture wires through the hole in the center of the fixture pan to the backside of the fixture. Using the support chain, connect one end to the back of the fixture pan near the center in the specially designed slots (Fig. 5) Hook the other end of the support chain to the electrical box (Fig. 6). This will allow for a hands free support for wiring.

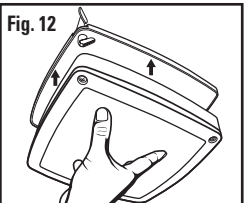
 Fig. 6
- 4**  Fig. 7

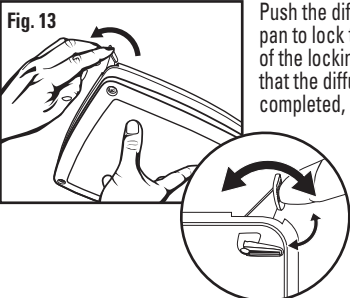
For safety and proper operation, the fixture must be properly grounded. A green or bare copper ground wire is preattached to the fixture pan. The fixture ground wire must be spliced to the green or bare copper ground wire in the electrical box using one of the wire nuts (Fig. 7). If house wiring does not include a ground wire, consult local electrical code for approved grounding methods.

Installation

- 5**  Connect the supply leads from the electrical box to the fixture wire leads using the pre-installed push-in connectors as per the illustration (**Fig. 8**). Insert the black supply lead into the open hole in the push-in connector with the black fixture wires already inserted into it. Insert the white supply lead into the open hole in the push-in connector with the white fixture wires already inserted into it (**Fig. 9**). All wire connections should be made on the backside of the fixture. Carefully push the excess wires back inside the electrical box.

- 6**  Locate the keyhole slots on the pan. The inner two are set at a distance that will accommodate a standard electrical box mount. Position the fixture pan (fixture posts facing toward the floor) over the electrical box so that both machine screws protruding from the electrical box pass through the larger round end of both keyholes in the fixture pan (**Fig. 10**). Once both screw heads have passed through the keyholes, twist the pan, until both screws are situated at the end of the narrow keyhole slots (**Fig. 11**). Hold in place and tighten the screws down tightly, without distorting or damaging the fixture pan.

- 7**  To attach the diffuser, pull both of the locking catches on the fixture pan into the open position. Place the lip of the diffuser up and inside the mounted fixture pan and hold into place (**Fig. 12**).

- 8**  Push the diffuser locking catches in toward the fixture pan to lock the diffuser in place (**Fig. 13**). If one or more of the locking catches does not properly lock, make sure that the diffuser is fully seated in the pan. Once completed, restore power to the electrical box.

Troubleshooting Guide

Minor problems often can be fixed without the help of an electrician. Before doing any work on the fixture, shut off power supply at the circuit breaker panel to avoid electrical shock.

Problem	Cause	Solution
Fixture doesn't light.	Power is off.	Check if power supply is on.
	Bad connection.	Check cords and/or wiring.
	Bad switch.	Test or replace switch.
Fuse blows or circuit breaker trips when light is turned on.	Discontinue use.	Call customer service.

Care and Maintenance

Periodically clean the fixture and diffuser using a mild, non-abrasive cleaner and soft cloth. When cleaning the fixture, make sure the power is turned off. Do not spray cleaner directly onto any part of the fixture or LEDs.

Need Help?



In the event you are missing a part or have questions regarding installation please visit our website at www.goodearthlighting.com/support or call the Customer Care Center 1-800-291-8838, 8:30 a.m.-5 p.m., CST, Monday-Friday.



Good Earth Lighting® Warranty

10 YEAR LIMITED WARRANTY

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of **(10)** years from the date of original purchase by the consumer. The fixture is not warranted for use in a commercial or retail application. The warranty is limited to use in a residential environment. We will repair or replace (at our option) the unit in the original color, and style if available, or in a similar color and style if the original item has been discontinued, without charge. Defective units must be properly packed and returned to the manufacturer with a letter of explanation and your original purchase receipt showing date of purchase. **Call 1-800-291-8838** to obtain a Return Authorization number and an address where to ship your defective product.

Note: C.O.D. shipments will NOT be accepted. The liability of the manufacturer is in any case limited to replacement of the defective light fixture product. The manufacturer will not be liable for any other loss, damage, labor costs or injury which is caused by the product. This limitation upon the liability of the manufacturer includes any loss, damage, or injury which is (I) to person or property or otherwise; (II) incidental or consequential in nature; (III) based upon theories of warranty, contract, negligence, strict liability, tort, or otherwise; or (IV) directly, or indirectly related to the sale, use, or repair of the product. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

Good Earth Lighting® 1400 East Business Center Drive, Ste. 108
Mount Prospect, IL 60056

Printed in China

Good Earth Lighting® is a registered trademark of Good Earth Lighting, Inc.