


HD Supply

14 IN. FLUSH MOUNT CEILING FIXTURE


HD Supply #326602
#326603
#326604

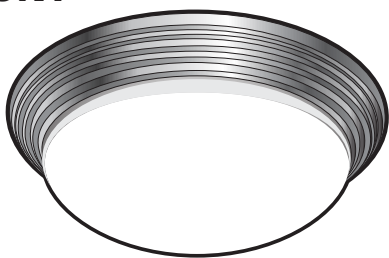

PACKAGE CONTENTS



MODEL #G4614-WH-IBX,#G4614-PB-IBX,#G4614-BN-IBX

Part	Description	Quantity
A	27W GU24 Bulb	1
B	Diffuser	1
C	Fixture Pan	1
D	Wire Nuts	3
E	Long Machine Screws	2
F	Bulb Socket	1

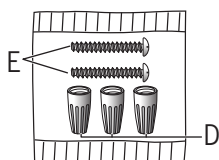

Hardware Kit

  *Actual hardware may differ from illustration.



! WARNINGS AND CAUTIONS

WARNING

- Shut off power at the circuit breaker or fuse panel before removing the old fixture.

CAUTION

- **DO NOT USE THIS FIXTURE WITH A DIMMING CIRCUIT.** If you presently have dimmer controls, you will need to remove them, and replace them with regular electrical switches. If you have a three way dimmer, you will have to replace it with a regular three way switch. If you are unfamiliar with electrical installations, we recommend you have a qualified electrician do your installation.

PREPARATION

Before beginning installation of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

Estimated Assembly Time: 45 minutes


Tools Required for Assembly



PREPARATION

DO NOT USE THIS FIXTURE WITH A DIMMING CIRCUIT. If you presently have dimmer controls, you will need to remove them, and replace them with regular electrical switches. If you have a three way dimmer, you will have to replace it with a regular three way switch. If you are unfamiliar with electrical installations, we recommend you have a qualified electrician do your installation.

WARNING: Shut off power at the circuit breaker or fuse panel before removing the old fixture (**Fig. 1**). Remove the old fixture. Make yourself a sketch of how the fixture is wired (index the sketch by wire color) or mark the wires themselves with masking tape and a pencil so you will know how to connect the wires to your new fixture (**Fig. 2**). If several wires are involved, however, or if the wiring seems more complicated and perhaps even includes a red wire, take note of the connections before you disconnect them.

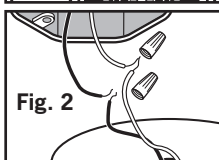

FIXTURE INSTALLATION

- 1 This fixture does not use a mounting bracket to secure it to the electrical box. Instead, it is secured to the box by the included screws specifically designed to ground the pan to a metal electrical box. For safe operation, use only the 1-1/2 electrical box screws (E) included in the hardware kit included with the fixture. Screw them into the electrical box until there is about 3/8 in. between the ceiling and the underside of the screw head (Fig. 1).

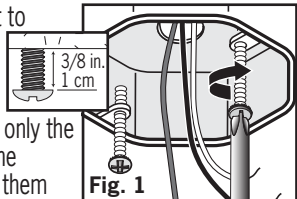


Fig. 1
- 2 To install the bulb socket (G), snap the metal socket clip into the rectangular hole until you feel it snap (Fig. 2). Feed the bulb socket wires through the circular wire hole, pull them through on the other side as much as you can without pulling it tight (Fig. 3).

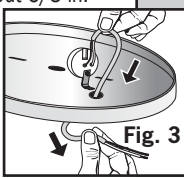


Fig. 2

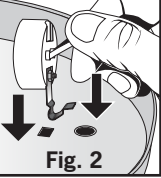


Fig. 3
- 3 For safety and proper operation, your fixture must be properly grounded (Fig. 4). If you are unfamiliar with the methods of properly grounding your fixture, consult a qualified electrician. A green or bare copper ground wire is pre-attached to your fixture pan (C). If your electrical box is plastic and has a green or bare copper grounding wire inside, the bare end of the fixture grounding wire must be secured to the green grounding wire inside your electrical box using one of the small wire nuts (D). If your electrical box is metal and contains no ground wire as part of a grounded electrical system, see #5, as the metal chassis will be grounded via the electrical box mounting screws.

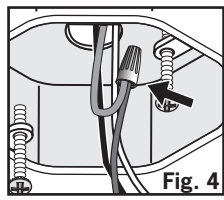


Fig. 4
- 4 Connect the supply leads from the electrical box to the fixture wire leads using the medium wire nuts (D) supplied in your installation hardware kit as per the illustration. The black lead from the fixture goes to the black supply lead, and the white lead from the fixture goes to the white supply lead. Secure the wire nuts properly to prevent the wires from coming loose (Fig. 5). Tape the wire nuts to the wire using electrical tape. Carefully push the excess wires back inside the electrical box (Fig. 6).

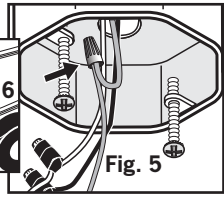


Fig. 5

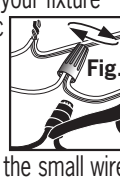


Fig. 6
- 5 Locate the key hole slots on the pan. The inner pair are set at a distance of 2-3/4 in. and will accommodate a small standard electrical box mount. The outer pair are set at a distance of 3-1/2 in. and will accommodate a standard electrical box mount. Position the fixture pan over the electrical box so that the machine screws protruding from the electrical box pass through the elongated keyholes in the fixture's pan. Once both screws are through the keyholes, twist the pan until both screws are up against the smaller end of the slot (Fig. 7). Hold in place and tighten the screws very tightly. The hardware kit includes two (2) long screws specifically for normal metal electrical boxes (E). Tighten the screws until the pan is tight up against the ceiling surface.

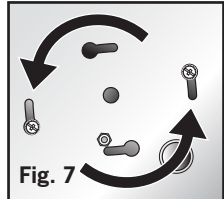


Fig. 7
- 6 Insert the proper GU24 base 27W compact fluorescent bulb (A) into the socket. Depending on the store where you purchased your fixture, it may or may not include the bulb with it. If you need to purchase a bulb, you will need to purchase a **27 Watt CF27W/self-ballasted GU24 base compact fluorescent bulb**. Hold the bulb by its base, insert the pins into the 2 curved slots in the bulb socket, and twist clockwise until the bulb locks into place. The bulb will click when it's secured in the socket. Do **NOT** force the bulb. **CAUTION: DO NOT HOLD THE BULB BY THE GLASS DURING INSERTION OR REMOVAL TO PREVENT ACCIDENTAL BREAKAGE! HOLD THE BULB BY THE PLASTIC BASE.**
- 7 While holding the diffuser (B) in the palms of your hands, apply sufficient pressure onto glass in order to rotate it clockwise until it screws onto the threads of the pan (Fig. 9). This will take approximately 1/4 turn. Make sure the diffuser is fully screwed onto the pan before releasing the diffuser with your hands.

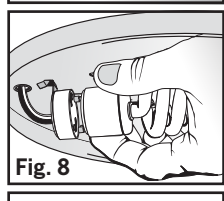






Fig. 9

- Restore power to the electrical box to make sure your fixture is working properly.


BULB REPLACEMENT INSTRUCTIONS

Your bulb should last up to 10,000 hours in normal use. When bulb replacement is necessary, you must replace the bulb with a **27 watt CF27W self-ballasted GU24 base fluorescent bulb**. These bulbs are readily available at your local home center and most larger hardware stores.

- Shut off power supply. Allow sufficient time for bulbs to cool properly before handling.
- While holding the diffuser in the palms of your hands, apply sufficient pressure onto the glass in order to rotate it counterclockwise until it unscrews from the pan (**Fig. 1**). This will take approximately 1/4 turn. Be careful not to drop the diffuser once it comes loose from the pan.
- Remove the old bulb by grasping it firmly at the plastic base and firmly twist counterclockwise until it “unseats” and lines up with the large end of the openings (**Fig. 2**). Pull straight out. Be careful not to drop the bulb.

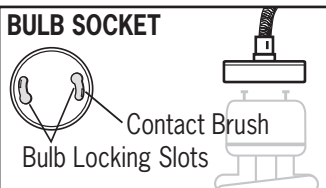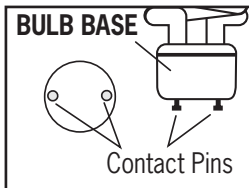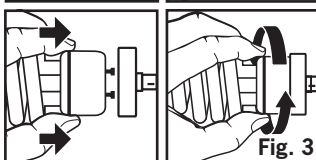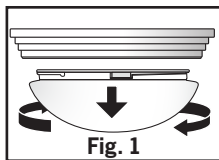

- Insert the replacement bulb into the socket and twist the bulb clockwise until the bulb locks into place. The bulb will click when it's secured in the socket (**Fig. 3**). Do not force the bulb into the socket or twist forcefully.
- While holding the diffuser in the palms of your hands, reattach it by applying sufficient pressure onto the glass in order to rotate it clockwise until it locks on the pan (**Fig. 4**). This will take approximately 1/4 turn. Make sure the diffuser is fully screwed onto the pan before releasing the diffuser with your hands. Restore power to the fixture.

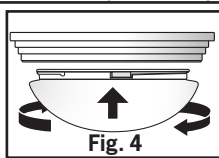

CARE AND MAINTENANCE

Your fixture is made from quality materials that will last for many, many years with minimum care. You may want to periodically clean the fixture using a mild, non-abrasive glass cleaner and soft cloth. Do **NOT** use solvents or cleaners containing abrasive agents. When cleaning the fixture, make sure you have the power turned off and do not spray liquid cleaner directly onto the bulb, socket, ballast, or wiring.

TROUBLESHOOTING


Minor problems often can be fixed without the help of an electrician. Before doing any work on the fixture, shut off power supply at the circuit breaker panel to avoid electrical shock.

Problem	Cause	Solution
Fixture doesn't light	Bulb is defective	Replace bulb
	Power is off	Check if power supply is on
	Bad wire connection	Check wiring
	Bad switch	Test or replace switch
Fuse blows or circuit breaker trips when light is turned on	Crossed wires or power wire is grounded out	Check wiring connections


REPLACEMENT PARTS LIST

Keep this guide handy for ordering replacement parts.

Hardware Kit
HDW4616

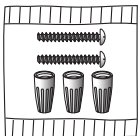

Diffuser
D4616

 

NEED HELP?



In the event that you are missing a part or have questions regarding installation, please call the customer service department at **1-866-455-4798**.

WARRANTY

2-YEAR

Good Earth Lighting® warrants this lighting fixture to be free from defects in materials and workmanship for a period of (2) years from the date of original purchase by the consumer.

We will repair or replace (at our option) the unit in the original color, and style if available, or in a similar color and style if the original item has been discontinued, without charge, exclusive of bulbs. Defective units must be properly packed and returned to Good Earth Lighting® with a letter of explanation and your original purchase receipt showing date of purchase. **Call us at 1-866-455-4798** to obtain a Return Authorization number and an address where to ship your defective product.

Note: No C.O.D. shipments will be accepted. The liability of Good Earth Lighting® is in any case limited to replacement of the defective light fixture product. Good Earth Lighting® will not be liable for any other loss, damage, or injury which is caused by the product. This limitation upon the liability of Good Earth Lighting® includes any loss, damage, or injury which is (I) to person or property or otherwise; (II) incidental or consequential in nature; (III) based upon theories of warranty, contract, negligence, strict liability, tort, or otherwise; or (IV) directly, or indirectly related to the sale, use, or repair of the product. This warranty gives you specific rights, and you may also have other rights which vary from state to state.



Questions, problems, missing parts? Contact the customer service department at 1-866-455-4798, 8am-6pm Monday through Thursday, EST, Friday 8am-5pm, EST.



LAMP CONTAINS MERCURY

Manage in accordance with disposal laws.

www.lamprecycle.org or/ou/o 1-866-326-BULB
www.epa.gov/mercury/spills/index.htm#fluorescent

Printed in China

Distributed by:

Good Earth Lighting, Inc.
5260 Capitol Drive
Wheeling, IL 60090

©2009 Good Earth Lighting, Inc.
HDS4309INS4614