

E English Warnings and Cautions

WARNING

- Shut off power at the circuit breaker or fuse panel before removing the old fixture or installing the new one.
- LEDs can be damaged by electrostatic discharge (ESD) shock. Before installation, discharge yourself by touching a grounded bare metal surface to remove this hazard. To avoid damage, do not remove the clear lens over the LED module.

CAUTION

 This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Important Safety Instructions

This unit has a grounded plug as a safety feature. This plug will only fit in an outlet one way. If it does not fit, do not use the outlet or contact a qualified electrician. Never use with a power strip unless the plug can be completely inserted. Do **NOT** attempt to defeat this feature.

WARNING: To reduce the risk of FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

- 1. For INDOOR USE ONLY.
- 2. Not intended for installation in plastic cabinets.
- 3. The mounting surface should be flat and sturdy enough to support the fixture.
- 4. Do **NOT** mount the fixture to cabinets having a material thickness less than 1/4 in.
- 5. Not intended for recessed installation in ceilings or soffits.
- 6. Do NOT use in wet locations.
- 7. Do **NOT** use for illumination of aquariums.
- 8. Do NOT mount over sinks or stoves.
- 9. Do **NOT** touch, operate, or install fixture while in contact with water.
- 10. Do not remove the protective LED lens or touch the LEDs at any time.
- 11. Use a soft cloth to clean the diffuser and/or fixture.
 - PLUG-IN/LINKING SAFETY INFORMATION:
- 12. Do **NOT** attempt to install while plugged in.
- Use only insulated staples or plastic ties to secure the power or linking cords.
- 14. The National Electrical Code (NEC) does not permit cords to be concealed where damage to insulation may go unnoticed. To prevent fire danger, do not run cord behind walls, ceilings, soffits, cabinets, or similar permanent structures where it may be inaccessible for examination. Cords should be visually examined periodically and immediately replaced when any damage is noted.
- 15. Do not use an extension cord. Use power strip with integral overcurrent protection to supply power to the fixture.
- 16. The total wattage of ALL the fixtures linked together in one chain should **NOT** exceed 360 watts. Exceeding the total wattage will result in a hazardous situation. Fixture wattage can be found on back of fixture.

IMPORTANT: These LED light heads use light emitting diodes to provide light. LEDs are electronic semiconductors and do not have a filament that can burn out like an ordinary light bulb. As such, the LED light heads can last up to 50,000 hours when used intermittently, and therefore, never need replacing.

SAVE THESE INSTRUCTIONS IN A LOCATION CLOSE TO THE LIGHT FIXTURE TO REFER TO THEM AT A LATER TIME. Before installation, plug in fixture to a 120 V, 60 Hz electrical outlet to check for proper operation. Then, unplug and begin the installation.

 
Dimmer Instructions

THIS FIXTURE IS DIMMABLE BY SPECIFIC FORWARD PHASE ELECTRONIC (TRAIC)

DIMMERS. Dimmers tested to be compatible with this fixture are the Lutron: Diva® C*L™: DVWCL-153P* or DVCL-153P*, Lumea® C*L™: LGCL-153P*, and Toggler® C*L™: TGCL-153P*. Not recommended for use with motion or light sensors, timers, or any other external controls.

Mounting Instructions


There are two methods to mount the fixture to a cabinet. The first is the **EASY MOUNTING INSTALLATION** method that uses the pre-installed screws located at both ends of the fixture. The other is the **TRADITIONAL MOUNTING INSTALLATION** method, which utilizes the keyhole slots located on the backside of the fixture.



Before mounting, find a suitable location to mount the fixture that will reach the power supply (within 5 feet) or to reach adjoining fixture (within 18 inches). The fixture has two power ports located at each end of the fixture. The "Power-In" port is located on the end next to the on/off switch and is used to connect the fixture

to a power supply. The "Power-Out" port is located at the opposite end and is used to link power to additional fixtures connected together.

 
EASY MOUNTING INSTALLATION



The fixture can be mounted without utilizing pilot holes. Firmly hold the fixture against the mounting surface and begin turning the mounting screws until they are fully driven in and the fixture is firmly attached to the mounting surface (**Fig. 1**). **NOTE**: DO NOT overtighten the screws, as it may result in damage to the fixture or the mounting surface. **Direct Wire Installation Only**: Determine the fixture location, but do not mount until the wiring steps are completed.

TRADITIONAL MOUNTING INSTALLATION

 1 Locate the mounting keyhole slots on the back of the fixture. Measure the center-to-center distance to determine the distance the wood screws need to be installed. Measure and mark the corresponding placement on the mounting surface. NOTE: The wire compartment cover can be opened on the fixture and trace the perimeter of keyhole slots.



Use a nail or awl to dimple the surface to help guide the screws. Either drive the screws directly into the surface or drill two 1/16 in. pilot holes to make installing the screws easier. The screws must be driven in straight. Tighten until 3/8 in. of the screws are protruding below the surface (Fig. 2). Place the large end of the keyhole slots over the screw and slide until the screws are engaged in the narrow ends of the slots (Fig. 3). If the fixture is loose, remove it and incrimentally tighten until

the fixture is secure. **Direct Wire Installation Only:** Do not complete mounting installation until the wiring steps are completed.

PLUG-IN INSTALLATION



Using a flathead screwdriver, carefully pry off the plastic cap that covers the "Power-In" port on the end of the fixture (**Fig. 4**).




WARNING: DO NOT plug the power cord into the power supply before completing the installation. The power cord has a grounded plug at one end and a connector plug at the other end. FIRST: Insert the connector plug into the power port located near the on/off switch at the end of the fixture (Fig. 5). The cord connector plug will

Fig. 5 end of the fixture (**Fig. 5**). The cord connector plug will **ONLY** fit into this power port. When fully inserted, the catch on the top of the connector plug will click into the power port. **SECOND**: Plug in the power cord into an outlet and the installation is complete.

DIRECT WIRE INSTALLATION

Disconnect power to the electrical box and remove the old fixture. If more than two wire leads are present, keep track of which wires were connected together. **WARNING: DISCARD THE POWER CORD** to avoid a dangerous situation.

Locate the fixture position and drill pilot holes at this time for **Direct Wire** installation.

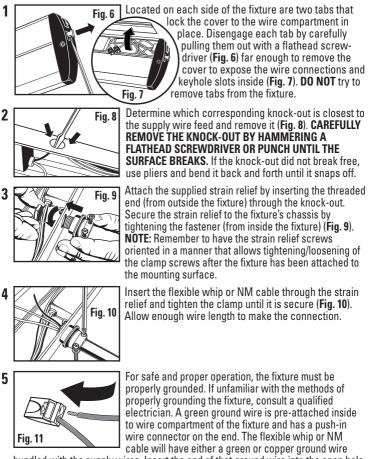

bundled with the supply wires. Insert the end of that ground wire into the open hole in the push-in connector (**Fig. 11**). If unsure whether or not the electrical system is properly grounded, or the flexible whip or NM cable is connected to an electrical box that is plastic and has no ground wire, or are unfamiliar with the methods of properly grounding the fixture, consult a qualified electrician.

 
DIRECT WIRE INSTALLATION

6



Connect the supply leads from flexible whip or NM cable to the fixture leads using the pre-installed push-in connectors as per the illustration (**Fig. 12**). Insert the black supply lead into the open hole in the push-in connector pre-attached to the black fixture wire. Insert the white supply lead into the open hole in the push-in connector pre-attached to the white fixture wire. All wire he and stowed inside wire compartment of the fixture

connections should be made and stowed inside wire compartment of the fixture. Carefully push all the wires into the wire compartment.




Re-attach the wire compartment cover by hinging the back edge of the cover with the channel in the back of the fixture chassis and lowering it into position (**Fig. 13**). Push both locking tabs inward to lock the wire compartment cover back into place (**Fig. 14**).

8 Mount to predetermined location. Restore power to fixture.

Linking Instructions

The first fixture is now fully installed and powered. It is now possible to link additional fixtures to this first unit. An 18 inch linking cord has been provided with each fixture. Ensure that the distance between additional fixtures does not exceed the length of the connector cord (18 inches).

 1 Shut off the power to the first fixture, either direct wired or plugged-in to house electrical system, prior to installing the linking cord.



Using a flathead screwdriver, carefully pry off the plastic cover that protects the "Power-In" port on the the fixture being added (**Fig. 15**). Carefully pry off the plastic cover that protects the "Power-Out" port on the the fixture it is being linked to.

 
3 Using the same mounting installation method used on the previous fixture, mount the fixture being linked.



4

NOTE: The linking cord is fitted with a distinct connector plug at each end. The cord can only connect one way. Try inserting one end of the linking cord into the "Power-Out" port on the fixture installed ahead of the this one, if that fails, try the other end (**Fig. 16**). **DO NOT** force the plugs into either port. When correctly inserted, the plug will insert smoothly and the catch on will click and lock into place. Insert the opposite end of

top of the connector plug will click and lock into place. Insert the opposite end of the linking cord into the "Power-In" port of the additional unit (**Fig. 17**).



NOTE: Each light can be individually operated by the on/off switch located on each fixture.

5 Restore power to the powered unit.

Troubleshooting Guide

Minor problems often can be fixed without the help of an electrician. Before doing any work on the fixture, shut off power supply at the circuit breaker panel to avoid electrical shock.

Problem	Cause	Solution
Fixture doesn't light.	Power is off.	Check if power supply is on.
	Bad plug connection.	Check cords.
	Bad switch.	Test or replace switch.
Fuse blows or circuit breaker trips when light is turned on.	Discontinue use.	Call customer service.

Care and Maintenance

IMPORTANT: This light fixture uses light emitting diodes (LEDs) to provide light. LEDs do not have a filament to burn out like a traditional light bulb. LEDs gradually emit less light over their lifetime, but will typically last 50,000 hours in a residential environment.

Periodically clean the fixture using a mild, non-abrasive glass cleaner and soft cloth. Do **NOT** use solvents or cleaners containing abrasive agents. When cleaning the fixture, make sure the power is turned off. Do not spray liquid cleaner directly onto the LEDs, fixture, diffuser, or wiring.

Need Help?



In the event you are missing a part or have questions regarding installation please visit our website at **www.goodearthlighting.com/support** or call the Customer Care Center **1-800-291-8838**, 8:30 a.m.-5 p.m., CST, Monday-Friday.

ecolight, Warranty

LIFETIME LIMITED WARRANTY

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for the lifetime of the product. The fixture is not warrantied for use in a commercial or retail application. The warranty is limited to use in a residential environment. We will repair or replace (at our option) the unit in the original color and style if available, or in a similar color and style if the original item has been discontinued, without charge. Defective units must be properly packed and returned to the manufacturer with a letter of explanation and your original purchase receipt showing date of purchase. Call 1-800-291-8838 to obtain a Return Authorization Number and an address where to ship your defective product. Note: C.O.D. shipments will NOT be accepted. The liability of the manufacturer is in any case limited to replacement of the defective light fixture product. The manufacturer will not be liable for any other loss, damage, labor costs or injury which is caused by the product. This limitation upon the liability of the manufacturer includes any loss, damage, labor costs or injury which is (I) to person or property or otherwise; (II) incidental or consequential in nature; (III) based upon theories of warranty, contract, negligence, strict liability, tort, or otherwise; or (IV) directly, or indirectly related to the sale, use, or repair of the product. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

Ecolight® 1400 East Business Center Drive, Ste. 108 Mount Prospect, IL 60056 Ecolight® is a registered trademark of Good Earth Lighting, Inc. All rights Reserved. **Printed in China**